

SIMULATION

1665, avenue des Affaires Quebec City (QC) G3J 1Y7

T.: 418.681.7708 F.: 418.681.9514


WWW.SCRIPTAMGLASSBOARD.COM

GLASS BOARD with "EdgeGrip" mounts

PROFILE

FLOOR



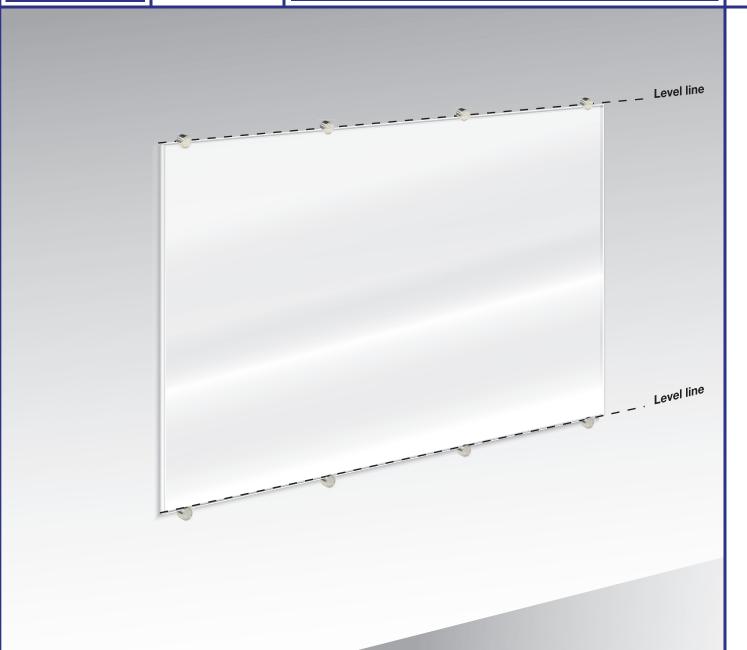



It is important to find the wall studs to install the board as securely and solidly as possible.

It is also important to make sure the wall you want to hang the board on is flat and not curved.

Determine the desired board height.

Measure the distance between the bottom of the board and the floor. Subtract 3/16 in. from this measurement to determine the height of the bottom mounts.

Before screwing the mounts into the wall, make sure they are level.

If the mounts cannot be attached to the studs, predrill the wall at the predetermined locations to add screw anchors.

Screw in the bottom mounts.

Next, place the glass board on the bottom mounts. At least 2 people are needed for this step. Once the board is in position, one person should hold the board against the wall while the other installs the upper mounts.